

## Supported printer list: 2010.06

Wi-fi direct print support printer			
EPSON Inkjet printer			
Artisan 700	Epson Stylus NX510	EPSON STYLUS PHOTO PX800FW	Epson Stylus TX550W
Artisan 710	Epson Stylus NX515	Epson Stylus Photo PX810FW	EpsonME OFFICE 650FN
Artisan 800	Epson Stylus Office BX310FN	EPSON STYLUS PHOTO TX700W	PM-T960
Artisan 810	EPSON STYLUS OFFICE BX600FW	Epson Stylus Photo TX710W	PM-T990
EP-802A	Epson Stylus Office BX610FW	EPSON STYLUS PHOTO TX800FW	PX-502A
EP-901F	Epson Stylus Office TX510FN	Epson Stylus Photo TX810FW	PX-601F
EP-902A	EPSON STYLUS OFFICE TX600FW	Epson Stylus SX510W	PX-602F
EP-901A	Epson Stylus Office TX610FW	Epson Stylus SX515W	WorkForce 310
Epson ME OFFICE 650FN	EPSON STYLUS PHOTO PX700W	EPSON STYLUS SX600FW	WorkForce 600
EPSON ME OFFICE 700FW	Epson Stylus Photo PX710W	Epson Stylus SX610FW	WorkForce 610

Network print server support printer			
EPSON Inkjet printer			
E-150	EPSON STYLUS CX7400	EPSON Stylus Photo R250	Epson Stylus TX419
E-200	EPSON STYLUS CX7400V	EPSON STYLUS Photo R260	PictureMate
E-300	EPSON STYLUS CX7450	EPSON STYLUS PHOTO R265	PictureMate 100
E-300L	EPSON Stylus CX7700	EPSON STYLUS PHOTO R270	PictureMate 500
E-330	EPSON Stylus CX7800	Epson Stylus Photo R2880	PictureMate Deluxe
E-330S	EPSON STYLUS CX8300	EPSON STYLUS PHOTO R340	PictureMate PM 200
E-500	EPSON STYLUS CX8400	EPSON STYLUS PHOTO R350	PictureMate PM 210
E-520	EPSON STYLUS CX9300F	EPSON STYLUS PHOTO R360	PictureMate PM 215
E-530C	EPSON STYLUS CX9400Fax	EPSON STYLUS PHOTO R380	PictureMate PM 225
E-530P	EPSON STYLUS DX3800	EPSON STYLUS PHOTO R390	PictureMate PM 235
E-530S	EPSON Stylus DX3850	EPSON Stylus Photo RX520	PictureMate PM 240
E-600	EPSON STYLUS DX3850plus	Epson Stylus Photo RX530	PictureMate PM 250
E-700	EPSON STYLUS DX4000	EPSON STYLUS PHOTO RX560	PictureMate PM 260
E-720	EPSON STYLUS DX4050	EPSON STYLUS PHOTO RX580	PictureMate PM 270
E-800	EPSON Stylus DX4200	EPSON STYLUS PHOTO RX585	PictureMate PM 280
EP-702A	EPSON Stylus DX4250	EPSON STYLUS PHOTO RX590	PictureMate PM 290
EP-801A	EPSON Stylus DX4800	EPSON STYLUS PHOTO RX595	PictureMate PM 300
EPSON CX7300	EPSON Stylus DX4850	EPSON STYLUS PHOTO RX610	PictureMate PM 310
EPSON CX7310	EPSON Stylus DX4850plus	EPSON STYLUS PHOTO RX615	PM-840S
Epson ME OFFICE 510	EPSON STYLUS DX5000	EPSON STYLUS PHOTO RX640	PM-A750
EPSON ME OFFICE 600F	EPSON STYLUS DX5050	EPSON STYLUS PHOTO RX650	PM-A820
EPSON ME PHOTO 20	EPSON STYLUS DX6000	EPSON STYLUS PHOTO RX680	PM-A840
EPSON STYLUS CX2800	EPSON STYLUS DX6050	EPSON STYLUS PHOTO RX685	PM-A890
EPSON STYLUS CX2900	EPSON STYLUS DX7400	EPSON STYLUS PHOTO RX690	PM-A920
EPSON STYLUS CX2905	EPSON STYLUS DX7450	Epson Stylus Photo TX650	PM-A940
EPSON STYLUS CX3700	EPSON STYLUS DX8400	Epson Stylus Photo TX659	PM-A950
EPSON STYLUS CX3800	EPSON STYLUS DX8450	EPSON STYLUS SX200	PM-A970
EPSON STYLUS CX3805	EPSON STYLUS DX9400F	EPSON STYLUS SX205	PM-D600
EPSON STYLUS CX3810	EPSON STYLUS DX9400F WiFi edition	Epson Stylus SX210	PM-D800
EPSON STYLUS CX3900	EPSON STYLUS NX200	Epson Stylus SX215	PM-D870
EPSON STYLUS CX3905	Epson Stylus NX215	EPSON STYLUS SX400	PM-G4500
EPSON STYLUS CX4000	EPSON STYLUS NX300	EPSON STYLUS SX405	PM-G850
EPSON STYLUS CX4050	EPSON STYLUS NX400	Epson Stylus SX410	PX-501A
EPSON STYLUS CX4080	Epson Stylus NX410	Epson Stylus SX415	PX-5600
EPSON Stylus CX4100	Epson Stylus NX415	EPSON STYLUS TX200	PX-A620
EPSON Stylus CX4200	EPSON STYLUS OFFICE BX300F	EPSON STYLUS TX203	PX-A640
EPSON Stylus CX4700	EPSON STYLUS OFFICE TX300F	EPSON STYLUS TX209	PX-A650
EPSON Stylus CX4800	EPSON STYLUS PHOTO 1400	Epson Stylus TX210	PX-A720
EPSON STYLUS CX4900	EPSON STYLUS PHOTO 1410	Epson Stylus TX213	PX-A740
EPSON STYLUS CX4905	EPSON STYLUS PHOTO 1900	Epson Stylus TX219	PX-FA700
EPSON STYLUS CX5000	Epson Stylus Photo PX650	EPSON STYLUS TX400	PX-G5300
EPSON STYLUS CX5900	EPSON Stylus Photo R240	EPSON STYLUS TX409	WorkForce 500
EPSON STYLUS CX6000	EPSON Stylus Photo R245	Epson Stylus TX410	
EPSON STYLUS CX7300			

EPSON Page printer			
AcuLaser C2800N	AcuLaser C4200DN	AcuLaser C9200	AcuLaser M2000
AcuLaser C3800N	AcuLaser C9100	AcuLaser CX21	AcuLaser M4000
EPL-N3000	EPL-6200(EPL-6200L is not supported)	LP-8500C	LP-M6000
LP-8300C	LP-7700	LP-2500	LP-S2000
LP-8700	LP-2400	LP-9800C	LP-S300
LP-8100	LP-7500	LP-9200C	LP-3000C
LP-8700PS3	LP-9500C	LP-9200B	LP-S7500
LP-9400	LP-9000C	LP-S6500	LP-M5000
LP-2200	LP-9000B	LP-S4500	LP-S4200
LP-8800C	LP-9100	LP-S4000	LP-S3500
LP-8900	LP-7900	LP-S3000	LP-S9000
LP-V500	LP-A500	LP-S5000	LP-S6000
LP-S7000	AcuLaser CX11	AcuLaser C1100	LP-S7100
LP-7000C	LP-S5500	LP-M5500	LP-M5600
AcuLaser C3000			